

**SO-ADI SONY ELECTRONIC FLASH EF-530 DG SUPER**

It is possible to use TTL Auto, Manual Flash, Autozoom Head, AF Auxiliary Lamp, Designated Slave Flash, Normal Slave Flash, Multi Flash, High-Speed Synchro, Wireless Flash, Exposure Compensation, Modeling Flash Function. Manual switching of the amount of light is 1/1 - 1/64. Auto Power-Off function shuts off 240 seconds after use.

	TTL Auto	Autozoom Head	Manual Flash	AF Auxiliary Lamp	High-Speed Synchro	Wireless Flash	Designated Slave Flash *1	Normal Slave Flash	Exposure Compensation Function
α-3xi (Maxxum / Dynax 3xi)	TTL	✓	✓	✓	×	✓	✓	✓	×
α-5xi (Maxxum / Dynax 5xi)	TTL	✓	✓	✓	×	✓	✓	✓	×
α-7 (Maxxum / Dynax 7)	ADI/DI(P-TTL)	✓	✓	✓	✓	✓	✓	✓ *2	✓
α-7xi (Maxxum / Dynax 7xi)	TTL	✓	✓	✓	×	✓	✓	✓	×
α-9 (Maxxum 9 / Dynax 9)	DI	✓	✓	✓	✓	✓	✓	✓ *2	✓
α-9xi (Maxxum / Dynax 9xi)	TTL	✓	✓	✓	×	✓	✓	✓	×
α-70 (Maxxum / Dynax 50)	ADI/DI(P-TTL)	✓	✓	✓	✓	✓	✓	✓ *2	✓
α-101Si (Maxxum 300Si / DynaxSi)	TTL	✓	✓	✓	×	✓	✓	✓	×
α-303Si (Maxxum / Dynax 500Si)	TTL	✓	✓	✓	×	✓	✓	✓	×
α-303Si Super (Maxxum / Dynax 500Si Super)	TTL	✓	✓	✓	×	✓	✓	✓	×
α-360Si (Maxxum QT Si / Dynax 300Si)	TTL	✓	✓	✓	×	✓	✓	✓	×
α-507Si (Maxxum 600Si / Dynax 600Si Classic)	TTL	✓	✓	✓	✓	✓	✓	✓	✓
α-707Si (Maxxum / Dynax 700Si)	TTL	✓	✓	✓	✓	✓	✓	✓	✓
α-807Si (Maxxum / Dynax 800Si)	TTL	✓	✓	✓	✓	✓	✓	✓	✓
α-5700i (Maxxum / Dynax 5000xi)	TTL	✓	✓	✓	×	×	✓	✓	×
α-7700i (Maxxum 7000i / Dynax 7000i)	TTL	✓	✓	✓	×	×	✓	✓	×
α-8700i (Maxxum / Dynax 8000xi)	TTL	✓	✓	✓	×	×	✓	✓	×
α-Sweet (Maxxum XTSi / Dynax 505Si Super)	TTL	✓	✓	✓	✓	✓	✓	✓	×
α-Sweet II L (Dynax 4)	ADI/DI(P-TTL)	✓	✓	✓	×	✓	✓	✓ *2	×
α-Sweet II (Maxxum< / Dynax 5)	ADI/DI(P-TTL)	✓	✓	✓	✓	✓	✓	✓ *2	×
α-Sweet S (Maxxum ST Si / Dynax 505Si Super)	TTL	✓	✓	✓	×	✓	✓	✓	×
α-7 DIGITAL	ADI/DI(P-TTL)	✓	✓	✓	✓	✓	✓	✓ *2	✓
αSweet DIGITAL	ADI/DI(P-TTL)	✓	✓	✓	✓	✓	✓	✓ *2	✓
α100	ADI/DI(P-TTL)	✓	✓	✓	✓	✓	✓	✓ *3	✓
α200	ADI/DI(P-TTL)	✓	✓	✓	✓	✓	✓	✓ *3	✓
α230	ADI/DI(P-TTL)	✓	✓	✓	✓	✓	✓	✓ *3	✓
α330	ADI/DI(P-TTL)	✓	✓	✓	✓	✓	✓	✓ *3	✓
α380	ADI/DI(P-TTL)	✓	✓	✓	✓	✓	✓	✓ *3	✓
α700	ADI/DI(P-TTL)	✓	✓	✓	✓	✓	✓	✓ *2	✓
α900	ADI/DI(P-TTL)	✓	✓	✓	✓	✓	✓	✓ *4	✓

\* It cannot be used on α-3700i, Vectis S100, Vectis S1, α-5000, α-7000 and α-9000.

\*1: It can be used as a Master unit only by using two DG SUPER units.

\*2: If built-in flash is used, please set the camera's flash control to Manual Flash mode.

\*3: Built-in flash cannot be used. Please set your Master unit to Manual Flash mode.

\*4: Please set your Master unit to Manual Flash mode.